



Contents

1 x Jacket - 1 x Battery
1 x Charger

Battery

Rated Capacity: 5000mAh 56Wh
Output: 11.1 V 2.0A max
Input: 12.6V 1.2A
Charging time: About 6.5 Hours.

Please fully charge the battery before first time use.

CHARGE BATTERY REGULARLY


Failure to charge battery prior to use will reduce battery life.

- 1 Battery should be kept away from children.
- 2 Do not get the battery wet. Keep the battery cool and dry.
- 3 Charge every 2 days if unused for long periods. Fully charged or discharged batteries left at idle for an extended period of time can damage the battery cells.
- 4 Do not expose the battery to extreme environments, water, fire, high temperatures, cold (below minus 30° Celsius) or impact.

INSTRUCTIONS OF USE

- 1  Connect the battery with the cable in the battery pocket of heated jacket. Do not pull the cable too hard.

- 2  Press the rubber controller on the left chest for three seconds. The light turns on and the Vest begins to heat up.

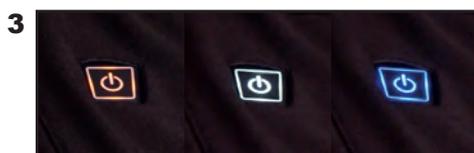

The button will then glow red as the jacket heats up. Once the heating element reaches the optimum heating temperature, the button will automatically turn white.

To reduce the heating to a lower operating temperature press the button again, it will now turn blue to show that the jacket is on the lowest temperature. Press for 3 seconds to turn off.



Also includes a USB port to charge a mobile phone.

Washing

- 1 Battery must be removed prior to washing.
- 2 Ensure the battery pocket is zipped up with the cable inside.
- 3 Machine wash in a small laundry bag. We recommend to spot clean with a damp cloth or hand wash in cold water with mild detergent, hang dry.

DO NOT IRON
DO NOT DRY CLEAN
DO NOT TWIST





CARDINAL HEATED SOFTSHELL JACKET

WARNINGS & SAFETY PRECAUTIONS

We thank you for purchasing the Cardinal heated softshell jacket. As with any electrical device it is important to follow instructions to avoid damage of the product, yourself or your property. Failure to follow instructions may cause overheating, fire or injury. Please read the instructions of use before wearing the heated jacket.

WARNINGS

Use carefully. May cause burns. You must frequently check skin exposed to the heated zones to avoid burning. Never expose bare skin to the heating area. Do not use over sensitive skin areas or in presence of poor circulation. The FDA and CPSC recommend the following precautions be taken to avoid hazards associated with the use of electric heating pads & clothing.

Always-

- Inspect heating unit before each use to assure it is in proper working order; discard if it looks worn or cracked or if the electrical cord is frayed.
- Unplug the battery when it is not in use.
- Read the instructions carefully on heating the jacket before use.

Never:-

- Use on an infant.
- Use on a person who is paralyzed or has skin that is sensitive to temperature changes.
- Use on a sleeping or unconscious person.
- Use in an oxygen enriched environment or near equipment that stores or emits oxygen.
- Crush or fold a heating pad during use or during storage.

ADDITIONAL WARNINGS

- Do not submerge the product or battery into while in use.
- Do not cut, puncture or tear into the lining of the product.
- Do not allow the battery to have contact with water or other liquids. If water or liquids enter the battery interior, immediately disconnect the product from the battery. Allow the battery to dry completely before use.
- Do not penetrate, strike, short-circuit or disassemble battery.
- Keep all electronic components of your product away from fire and extensive heat.
- Do not reverse polarity.
- Do not leave product unattended while connected to battery.
- Only use the charger and battery included with the ØRN product.

CAUTION

Your 12v heated product should only be used with 12v battery. Never connect your 12v battery with any non 12v ØRN heated product regardless of how similar the plugs may look, may feel, or appear to fit or work together.

If you experience any discomfort while using this product, remove it immediately and consult your doctor before resuming use.

Check with your Doctor before use if you:

- Have a heart condition or pacemaker.
- Have Diabetes.
- Have circulatory problems.
- Have sensitivity to heat
- Are Pregnant.
- Are under 13 years of age.

It is not recommended to use the hottest setting while indoors for a long period of time as it may cause overheating and body discomfort.

Warranty

When you purchase a ØRN Cardinal Heated Jacket you will be covered by a 30-day money back guarantee. If for any reason you are not satisfied with your purchase of your ØRN Cardinal Heated Softshell Jacket you MUST send it back within 30 days for a full product refund. Please note that in order to take advantage of this offer; the item must remain in new and unused condition with all the original packaging.